

EGR

INSTALLATION INSTRUCTIONS



- Do not use power tools to install this product.
- No battery operated screw guns.
- The use of power tools during installation may void the product warranty.
- Do not overtighten.

MADE IN AUSTRALIA

INSTALLATION INSTRUCTIONS

- 1 • Clean the vehicle before installation of the Hood Protector.
Trial fit Hood Protector centrally onto hood. With a non-permanent marker, mark the positions of the two centre slots in the Hood Protector onto hood. Also note and mark the metal wing clip positions corresponding to the outer slots of Hood Protector. Remove Hood Protector.
- 2 • Insert screw plugs provided into the two vacant holes.
- 3 • Re-install the Hood Protector,
- 4 • While maintaining thumb pressure against the underside of the Hood Protector, insert large washer and self-tapping screw into the screw plug and tighten screws. Do not fully tighten yet. Ensure the Hood Protector is centralised on hood then fully tighten screws.
DO NOT OVERTIGHTEN SCREWS.

- 5 • Clean the noted areas under the wing clip locations with alcohol wipe provided. Wipe off any residue with a dry clean cloth. Adhere the abrasive resistant tape strips over the hood lip. Apply tape so approximately half of each strip is adhered to the top side and half is adhered to the underside of hood.

- 6 • Fit the nut inserts into the square slots of the metal wing clips.

- 7 • Slide the metal wing clips over the abrasive resistant tape strips on the hood lip. Fasten Hood Protector with screws and small washers provided.

IMPORTANT: Ensure that the clips are positioned over abrasive resistant tape and do not come in contact with any of the hood's paint work. Failure to do this may result in permanent paint damage.
TO REMOVE: Reverse the above procedure.

To Clean: Use mild detergent and water solution (Do **NOT** use solvents). Avoid the use of automatic "Brush Style" car washes. When closing the hood, do **NOT** pull on Hood Protector.

