



Power-Plus Series® V-6 Mustang Throttle Body

I N S T A L L A T I O N I N S T R U C T I O N S

- Step 1** Disconnect negative (-) battery terminal.
- Step 2** Disconnect the Throttle Position Sensor (TPS) electrical connector; the throttle cable and the auxiliary return spring (if equipped) from the stock throttle body.
- Step 3** Unclamp and move aside the air filter inlet tube from the neck of the throttle body.
- Step 4** Unbolt four (4) nuts attaching throttle body from the manifold and remove from the vehicle.
- Step 5** Clean gasket surface on intake manifold and install supplied throttle body base gasket. (The manifold opening may be port-matched for optimum performance; some models may require this for butterfly clearance when part throttle.)
- Step 6** Remove the TPS from the stock unit and install on the BBK throttle body; if equipped swap the IAC valve from the stock throttle body to the BBK unit using supplied gasket and stock hardware.
- Step 7** Install BBK throttle body onto manifold and tighten using stock nuts, or new hardware if supplied.
- Step 8** Reconnect the electrical connectors, return springs and inlet tube.
- Step 9** Reconnect negative (-) battery terminal and start the vehicle.