


Note: These instructions are general guidelines for the installation of sheepskin seat covers. Due to the wide variety of seat styles, actual installation steps may vary.

SEE ADDITIONAL DETAILED INSTRUCTIONS IF REQUIRED

Need help? Call us at 800-821-4737

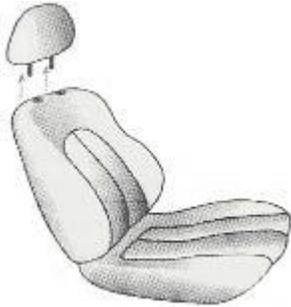

STEP 1

1. Low back seats with removable headrests - Remove headrest completely from top of seat, look for button to push or pin holes.
2. Lowback seats with non-removable headrests - Your seat cover will have a Velcro strip at the very top that must be opened and slipped over and around the headrest and closed back up again..

Step 2
HIGH BACK SEATS ; Built in Headrests –

These covers will slip over the backrest easily. Double check to see that you have the cover on the correct seat and that it's not upside down. There are no straps at the top! Once the cover is fitted onto the backrest, make sure it is centered and looks straight. Allow the seat cover bottom to just lay loose on top of the seat as you proceed to step 3.

Remember to lift your seat up as high as it will go and move your seat forward. Use the White Plastic stick provided, anytime you need to work in close tight areas. One end has a hole the other an open end allowing you to pull a strap under the seat and once connected you can release it. If it breaks, just use the other end which is also handy for the side straps.

Step 3



Take the three straps and push them through the crack between the backrest and seat bottom and pull them (tugging hard) through the break between the seat and backrest. If seat does not allow for center break strap to pull through, lift the flap at rear of seat and pull them through. Some flaps can be released from under the seat making it easier for you to connect the straps. When connecting the hooks, stay above the wires and cables and connect to the ceiling of the seat bottom.

Step 4



When fitting the seat bottom, try to line up the seams of the seat cover, with the seams of vehicle's seat, (unfold) the cover down the inside of the seat first, (next to the console) pushing with your forefingers, then continue around to front and side facing door..

Step 5



Recline the backrest to stretch out the cover. Bring backrest upright and tuck in all excess sheepskin into break of seat. (If seat bottom is designed with bottom molding, tuck the side skirts of seat cover into the plastic molding). In some cases you will see 2" pouches that you will need to squeeze and push down.


Squeeze pouches & tuck into molding around seat cushion

Step 6

Now move to the front of the seat bottom (facing steering wheel if on driver's side) and move the seat back. If you see you have front straps, grab the hook and reaching under your seat, hook it where you can. If your seat is very low to the floor even after it's lifted as high as it will go, then consider connecting the rear straps to the front straps.

The front straps do not need as much tension on them as do the rear, so if they don't stretch all the way, that's OK. If you have a plastic molding around the front of the seat, use the white plastic stick to connect to hook and pull down inside and under the seat.

Step 7

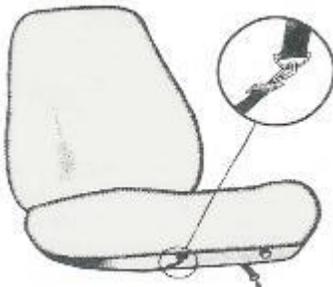


Some covers come with "D" rings in the front, so using your white stick, connect it to the snap hook at the rear and pull them through to the front and snap onto the "D" rings.

Step 8 Side air bags



The remaining straps on side panels of upper half and lower half of covers fasten to any attachment under seat or to straps on the other side. If you can't find these straps they may have got caught up in the cover or it's been replaced with a Side Air Bag Strap: A 22" elastic strap with Velcro attached at the end, pull around behind the seat from the inside of the cover and connect to the outside panel with inside opposing Velcro. If an accident occurs & air bag deploys, so does the side panel.

Step 9

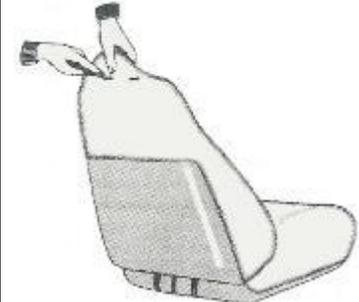

For low back seats only (seats with an adjustable headrest). You should now have a snug fit and be ready to replace headrests. After locating position of headrest receptors where in most cases a hole or slit will have already been cut, but if not, use a sharp instrument to pierce cover, cutting a small slit about 2" and Insert headrest poles through. If you can push down around the plastic base, you will still be able to adjust your Head Rest.