

T-REX

Billet Grilles

21728

2008 HONDA

ACCORD

BILLET INSERT

21728

2008 HONDA

ACCORD

BILLET INSERT

2008 HONDA ACCORD SEDAN

BILLET INSERT – 1 PC

Tools Required:

Philips/Flathead Screw driver
5/16 Socket or Wrench

Hardware / Parts Included:


- 1 Billet Insert
- 4 U Nuts
- 4 1 ¼" Philips Screws
- 4 1 ½" J Hooks

Read and understand instructions before attempting installation

Step 1

Remove the plastic fasteners holding the motor cover in place. Remove the Plastic grille insert from the bumper by releasing the clip on the perimeter of the grille.

IF YOU PURCHASED THE LOWER GRILLE, INSTALL NOW!

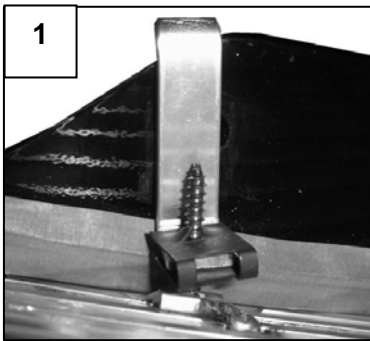

Locate the provided j hooks and place a U-nut on the flat end. Center the new grille into the grille opening. From the front side of the grille, place the screws through the grille brackets. Place a J-hook behind the grille making sure that the hook holds to the lower plastic (1). Repeat this on the remaining lower hooks. Making sure that the grille is centered, tighten screws securing the grille to the vehicle.

Step 2

Replace the upper motor cover using the factory clips. The two front center clips will line up with the upper grille mounts. Enjoy your new grille.

Thank you for purchasing a T-Rex Billet Grille. 04/07/08