

# **T-REX**

## **Billet Grilles**

25728

2008 HONDA

ACCORD

**BILLET INSERT**

25728

2008 HONDA

ACCORD

**BILLET INSERT**

### **2008 HONDA ACCORD SEDAN**

#### **BILLET BUMPER INSERT – 1 PC**

#### **Tools Required:**

Philips/Flathead Screw driver  
5/16 Socket or Wrench


#### **Hardware / Parts Included:**

- 1 Billet Bumper Insert
- 2 6-32 x 1 ½" Machine Screws
- 2 ½" x ½" L Brackets
- 2 6-32 Nylon Lock Nuts

### **Read and understand instructions before attempting installation**

#### **Step 1**

Remove the plastic fasteners holding the motor cover in place. Remove the Plastic grille insert from the bumper by releasing the clip on the perimeter of the grille.

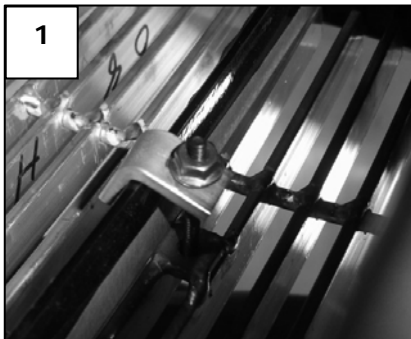

Install the bumper grille into bumper opening. Place a machine screw into the billet bracket. From the backside of the grille, place an L bracket and nylon lock nut onto each stud. Make sure that the L brackets wrap onto the bumper plastic (1). Making sure that the grille is centered, tighten the screws and securing the grille to the vehicle.

#### **Step 2**

Replace the grille. Replace the upper motor cover using the factory clips. Enjoy your new grille.

***Thank you for purchasing a T-Rex Billet Grille. 04/07/08***