


# WeatherTech®

## No-Drill MudFlap

### Installation Instructions

Thank you for purchasing the WeatherTech® No-Drill MudFlap. Please read this installation guide to thoroughly familiarize yourself with the steps to install the MudFlap on your vehicle. When properly installed, the WeatherTech® No-Drill MudFlap will provide you with years of protection.

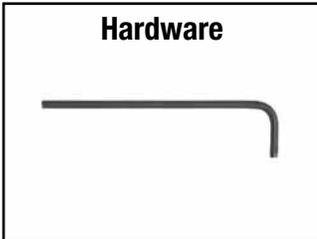

Parts Kit (F)

(1) 5/32" Hex Key

#### ⚠ WARNING ⚠


The MudFlap is designed to fit vehicles with standard size wheels and tires. Installation of MudFlaps on vehicles with aftermarket wheels or oversize tires may interfere with the MudFlap, will void the warranty and may damage the MudFlap or the vehicle.

- 1 Start by thoroughly washing your vehicle. Take care to remove all dirt, debris, and stains from each fender in the areas corresponding to where the MudFlaps will be installed.

- 2 Begin driver's side MudFlap installation by parking the vehicle on level ground. Identify the driver's side MudFlap by locating the "LH" mark located inside the MudFlap.



- 3 Please note the plastic tab located on the bottom portion of the MudFlap. This tab will be used to hook around and hold onto the bottom of the fender lip of the vehicle.

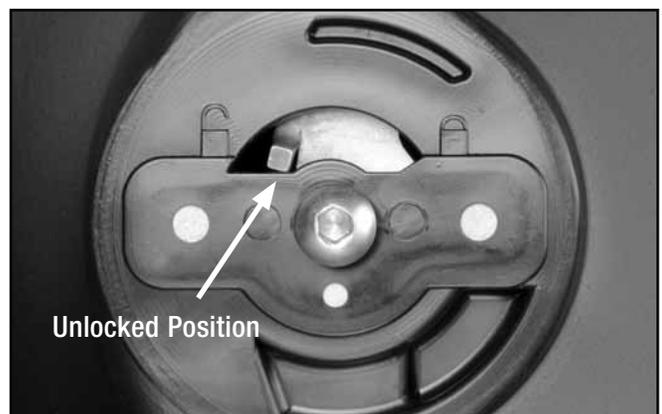

- 4 Locate the (2) QuickTurn™ fasteners located on the MudFlap. Ensure that they are both in the unlocked position indicated (there are padlock symbols on the inside of the MudFlap).

[View Easy Installation Video](https://www.weathertech.com/install)  
[WeatherTech.com/install](https://www.weathertech.com/install)

Questions? Call customer service at 630 769 1500  
Monday - Friday: 9 a.m. to 5 p.m. Central Time



**5** While holding the MudFlap at approximately 45° from vertical (shown), hook the plastic tab on the MudFlap around the inside corner of the fender lip.



**6** When the lip edge has been hooked, rotate the MudFlap up into position onto the edge of the fender. The MudFlap will fit perfectly to the contour of the fender.



**7** While holding the MudFlap in place, use the hex key provided to tighten the lower QuickTurn™ fastener. The indicator (on the fastener) will rotate 90° to the locked position (indicated by padlock), continue rotating the hex head bolt until the MudFlap is tightly clamped to the fender lip (the bolt will have some resistance to turning).



**8** While continuing to hold the MudFlap in place, tighten the upper QuickTurn™ fastener. The indicator (on the fastener) will again rotate 90° to the locked position. Continue rotating the hex head bolt until the MudFlap is tightly clamped to the fender lip.



**9** Begin passenger side installation by identifying the MudFlap marked "RH". Repeat steps 3-8.

## Congratulations!

**Your new WeatherTech®  
No-Drill MudFlaps have been installed!**

Your WeatherTech® No-Drill MudFlap carries a Lifetime Warranty against defects in materials and workmanship when installed correctly.

**[View Easy Installation Video](#)**  
**[WeatherTech.com/install](#)**

**Questions? Call customer service at 630 769 1500**  
**Monday - Friday: 9 a.m. to 5 p.m. Central Time**