


Dear Customer,

# INSTRUCTION SHEET (U)

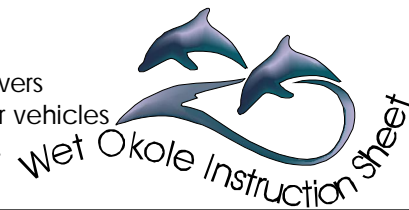


As we are unable to assist you on installing your Wet Okole Hi. Waterproof sport seat covers we offer these special instructions. This particular instruction is a universal instruction. Mostly all other vehicles are self explanatory. Any problems please feel free to call for technical support at 1(888)24-Okole. Enjoy your Wet Okole Hawaii Seat Covers!

## Step 1

Install side strap by inserting it between the seat and plastic molding. (It may be necessary to remove the buckles from the strap first.)


**NOTE:** Plastic may need to be removed on certain vehicles. Plastic moldings are usually mounted with phillips screws.

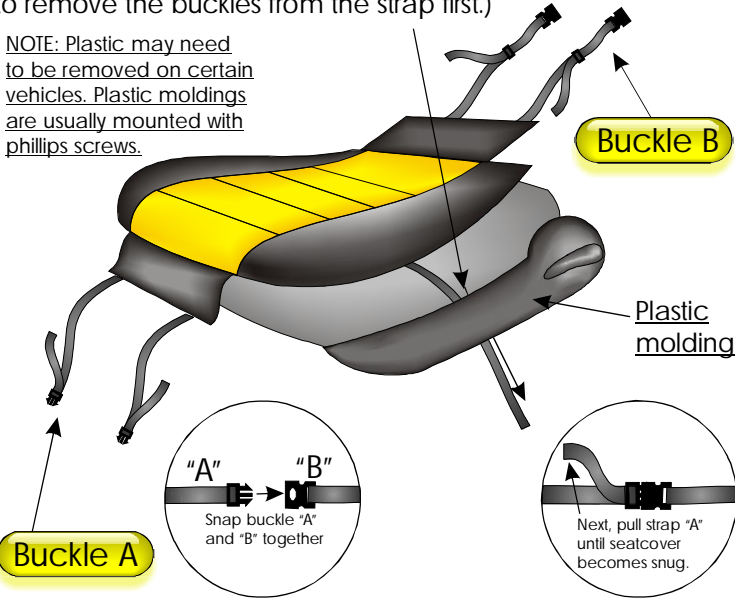

## Step 2


If your vehicle has removable headrest remove them before you install your seat covers.

(Step 2) Release mechanism is located in plastic housing. Look for a small hole or button.

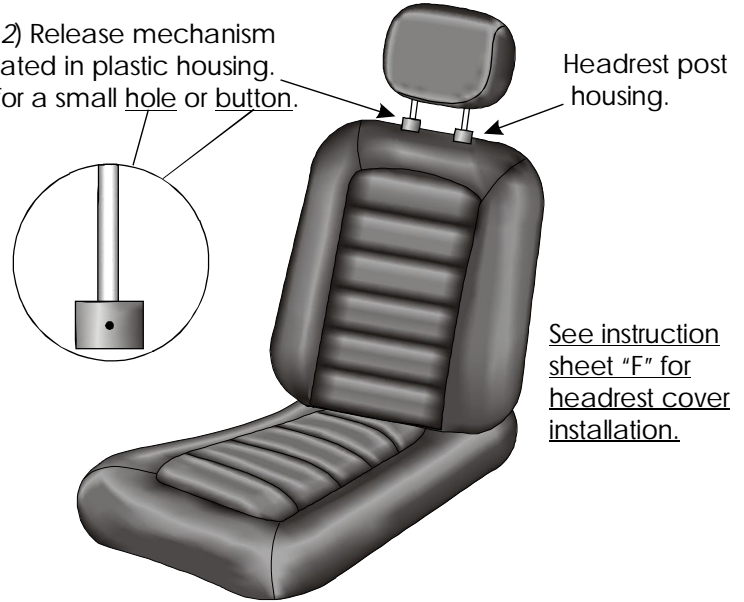


## Step 3

(Step 3) Pull portion "A" down over the back rest evenly taking care not to pull too hard. Push portion "A" through bottom of back-rest (between seat-bottom and backrest gap).

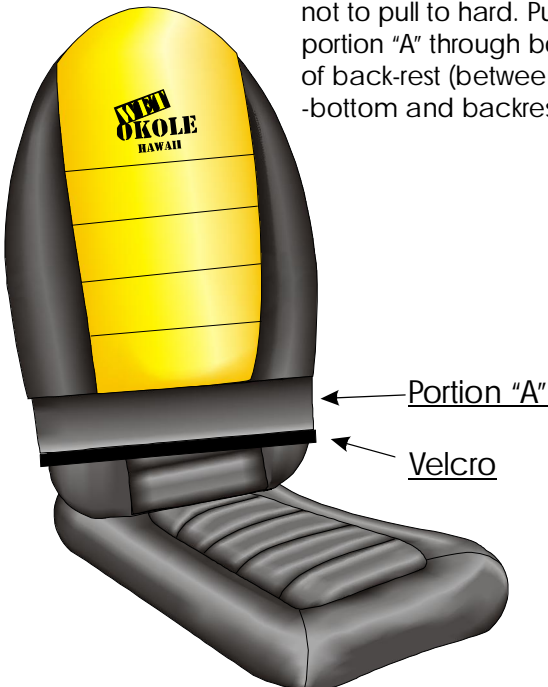

## Step 4

(Step 4) After you have completed step 3 fold the backrest forward and from behind the seat attach velcro from portion "A" and "B" together

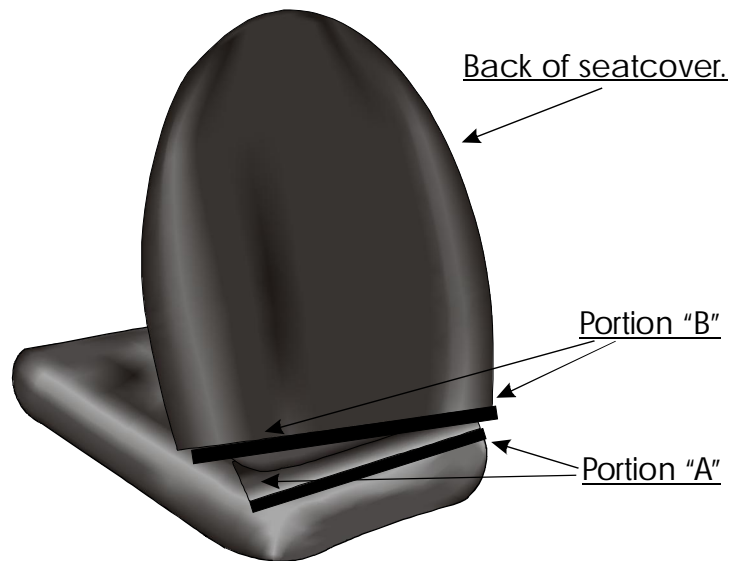

## INSTALLATION QUESTIONS

TECHNICAL ASSISTANT HOT-LINE CALL TOLL FREE 1(888) 24-OKOLE  
MONDAY-SATURDAY 8:00 A.M.-4:30 P.M. PACIFIC TIME.